



USER MANUAL

HDMI KVM Fiber Extender OVER IP

P/N: ITT-HDMI-1080

Enjoy the vivid world

Introduction

HDMI fiber extender is a device to use single mode and bidirectional fiber cable to transmit HD audio and video, the longest distance is 20km, and it support one to one and one to many mode



Features

- * Support HDMI 1080p 60Hz.
- * It supports one-to-one or one to many transmission mode and can pass through fiber
- * Support single-mode single fiber LC, SC interface module, factory default is LC interface module
- * TX side supports HDMI loop out.
- * Support KVM function.
- * Support IP transmission.
- * Pure hardware design, plug and play, no need to install additional software.

Specifications HDMI input...

HDMI output Optical fiber wavelength. ..1310nm/1550nm; 1550nm/1310nm Maximum power consumption . Input (50 Hz, 60 Hz) 100v-240 V; Output 5V / 1A Power adapter specification.

..(0 to + 45 °C) Operating temperature range . 5% to 90% RH (non-condensation) Working range . Dimensions (L x W x H) 163x86x24 (mm) TX weight. RX weight.

Physical interface diagram

HDMI Transmitter



Ports	Function description	
Fiber-LC	Optical fiber SC / LC connector	
HDMI IN	HDMI input	
DC/5V	5V Power Interface	
Power	power adapter indicator	
Link	System working indicator	
USB-PC	USB port (connect to pc)	
IR-TX	IR transmitter port	
HDMI OUT	Local HDMI loop out	

HDMI Receiver

. 1080p / 720p / 480p

..1080p / 720p / 480p

...TX4w: RX3W




Ports	Function description
Fiber-LC	Fiber LC / SC port
HDMI OUT	HDMI output
DC/5V	5V Power Interface
Power	Power adapter indicator
Link	System working indicator
Keyboard	Connect to keyboard
Mouse	Connect to mouse
IR-RX	IR receiver port

Connection and operation

starts normal

- 1. Connect the HDMI signal to the HDMI Transmitter with HDMI cable
- 2. Connect the HDMI receiver to the HDTV display with HDMI cable 3. Use one fiber cable up to 20km to connect the Fiber-LC type port of Transmitter and
- Receiver 4. Connect two pieces of 5V power supply to the transmitter and receiver, power supply
 - for the equipment and the LED indicator light on. When Link lamp on, equipment

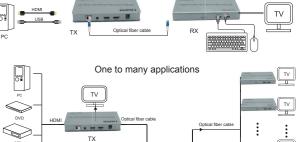



Application diagrams







5:IR cable

Audio-visual conference

Command and control center

2: HDMI fiber extender receiver

Package include 1: HDMI fiber extender transmitter

3: DC 5V power supply

4: User's Manual